



Installation Instructions for the Audit Control Extension





WARNING

Disconnect from electric supply before servicing. Failure to do so could result in death, electrical shock or other serious injury.

1. Disconnect machine from electrical power.
2. Remove coin box top access panel.
3. Unscrew green ground wire screw as shown at "A," below. Keep screw for later use. Attach ground wire to Actuating Arm bracket. See step 4 Coinslide Start Mechanism Assembly Instructions.
4. Connect the two harness wires to coin slide switch at "D," below.
 - Connect white wire to common terminal
 - Connect red wire to normally open terminal
5. Connect other side of harness wires to supplied Coin 1 connection extension located inside meter case.
6. Insert Coinslide Start Mechanism into meter case and secure with Coinslide mounting bolt.

Important! These steps should be performed by trained service personnel.


7. Attach ground wire as shown at "A," below.
8. Use screw from step 3 to attach ground wire ring to meter case.
9. Place rubber grommet of harness over end of mounting bolt at "B," below.
10. Mount the provided cable tie and adhesive-backed cable-tie mount in left rear corner of meter case at "C," below.
11. Secure Micro-switch harness wires using cable-tie mount and cable tie.
12. Replace meter case access panel.
13. Reconnect electrical power.

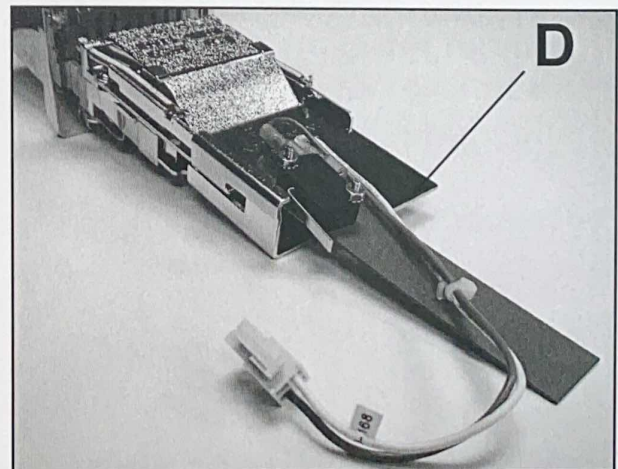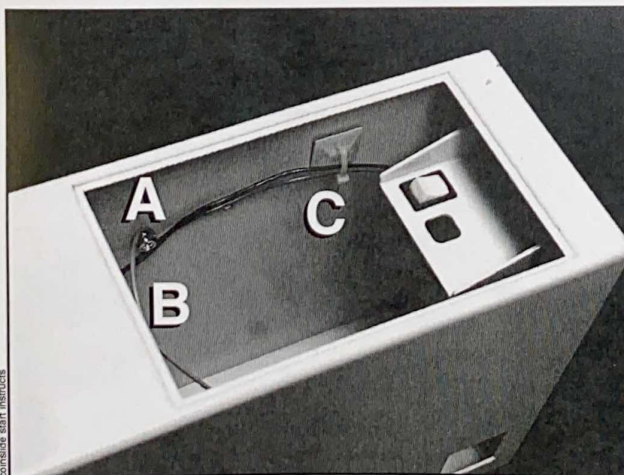




Assembly Instructions For Audit Control Extension (Part No. 22800)


1. Unhook the return springs from spring bracket and leave undone. (Fig. 1, A)
2. Push handle forward into coinslide to expose spring bracket. (Fig. 2, part # B-21860)
3. Remove screw holding spring bracket and remove. (Fig. 2, A) Pull slide back into coinslide body.
4. Remove the two bridge screws (6/32") that hold the bridge to the coinslide body. (Fig. 1, B) Lift bridge off of coinslide.
5. Set bridge back in place. Attach mounting bracket (fig. 3) over top of bridge using the two screws removed in step 4.
** Do not overtighten **
6. Slide Actuating Arm (fig. 4) through bracket.
7. The base of Actuating Bracket is mounted on the underside of coinslide. Attach Actuating Bracket using the two supplied screws.
8. Reattach extension springs. (Fig. 1, A)

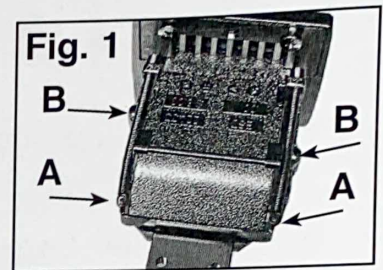

Coinslide

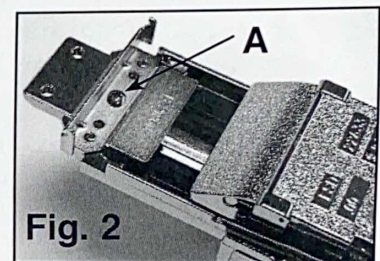

Mounting
Bracket

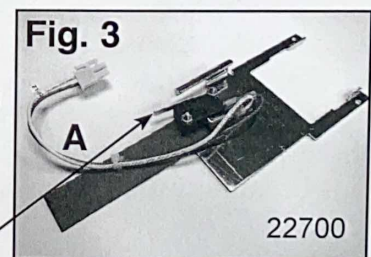

Swivel
Arm

Actuating
Bracket

